

EW3595
Bluetooth headset with radio FM and slot for microSD card



EW3595 Bluetooth headset with radio FM and slot for microSD card

Table of contents

1.0 Introduction	2
1.1 Packing contents	
2.0 Function and control	
3.0 MP3 mode (play from microSD card)	3
4.0 FM radio mode	4
5.0 Bluetooth mode	4
6.0 Recharge the headset EW3595	4
7.0 Frequently Asked Questions and other related information	4
8.0 Service and support	4
9.0 Warranty conditions	5

1.0 Introduction

Congratulations with the purchase of this high-quality Ewent product! This product has undergone extensive testing by Ewent's technical experts. Should you experience any problems with this product, you are covered by a five-year Ewent warranty. Please keep this manual and the receipt in a safe place.


Register your product now on www.ewent-online.com and receive product updates!

1.1 Packing contents

The following parts need to be present in the packing:

- EW3595 Bluetooth headset with radio FM and slot for microSD card
- USB cable for charging
- Manual

2.0 Function and control

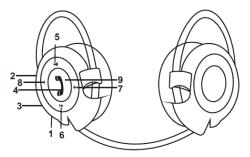

- 1) Power button ON / OFF
- 2) Micro SD Slot
- 3) USB port for charging
- 4) Bluetooth button

Long press: to switch MP3/FM/Bluetooth mode Short press: Play/Pause music in MP3 mode, answer/hang up a call in Bluetooth mode, auto search and save radio channel in FM mode

- 5) Previous
- 6) Next
- 7) Volume up
- 8) Volume down
- 9) Status LED

Bluetooth mode: blue light will fast flash, the light stays on after paired, slow flash when music is playing

FM mode: blue light is on, fast flash when searching radio channel, one flash after saving a radio channel

MP3 mode: blue light is on in pause mode, slow flash when playing music

Charging: while charging the LED is red. When charging is completed, the LED turns

OFF

3.0 MP3 mode (play from microSD card)

- 1. Insert the microSD card into the slot
- 2. Turn on the headset. The headset starts in Bluetooth mode by default.
- 3. Long-press the "Bluetooth" button until the MP3 mode is set.

Note: The headphone EW3595 supports microSD up to 16GB and audio formats MP3 and WMA.

4.0 FM radio mode

- 1. Long-press the button "Bluetooth" until the FM mode is set
- 2. Short-press the "Bluetooth" button to search and save channels
- 3. Refer to Chapter 2 for other functions

5.0 Bluetooth mode

- 1. Turn on the headset. The headset starts in Bluetooth mode by default.
- 2. Turn on the Bluetooth function on your device
- It will start searching for other devices
- 4. Select the device "eFashion EW3595" and, if asked, enter the code "0000"
- Once the headset makes the connection, a voice alert tells you that the pairing is successfully completed.
- 6. Refer to Chapter 2 for other functions

Note: After the first paring is not necessary to pair again the headset EW3595 with your device.

6.0 Recharge the headset EW3595

- 1. Plug the USB cable into a USB AC charger or the USB port of the PC
- 2. Plug the other side into the USB connector on the headset EW3595

Note: When the headset has a low battery, the red LED above the play / pause button will start to flash

7.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Ewent will update these pages frequently to assure you have the most recent information. Visit www.ewent-online.com for more information about your product.

8.0 Service and support

This users manual has been carefully written by Ewent's technical experts. If you have problems installing or using the product, please fill out the support form at the website www.ewent-online.com/

You can also contact us by phone. Below you will find a list with phone numbers for each supported country.

Phone number	Rate per minute
070 277 286	€0.30
070 277 286	€0.30
+45 69918565	Local Costs
+35 8942415826	Local Costs
+49 (0)30 887 89 298	Local Costs
+39 0240042016	Local Costs
+47 21075033	Local Costs
807 080 042	€0.41
+46 840 309985	Local Costs
0900-3646368	€0.10
+44 (0)203 318 9998	Local Costs
1-4088902 (From	Local Costs
Budapest)	
06-1-4088902 (From the	Local Costs
rest of Hungary)	
+36 1-4088902	Local Costs
(International)	
	070 277 286 070 277 286 +45 69918565 +35 8942415826 +49 (0)30 887 89 298 +39 0240042016 +47 21075033 807 080 042 +46 840 309985 0900-3646368 +44 (0)203 318 9998 1-4088902 (From Budapest) 06-1-4088902 (From the rest of Hungary) +36 1-4088902

^{*} Rates mentioned in this table do not include cell phone charges.

9.0 Warranty conditions

The five-year Ewent warranty applies to all Ewent products, unless mentioned otherwise before or during the moment of purchase. After buying a second-hand Ewent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Ewent warranty applies to all Ewent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Ewent warranty. Products are not covered by the Ewent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Ewent. Ewent may use refurbished materials for repair or replacement of your defective product. Ewent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Ewent networking product will keep working when settings are changed by the internet providers. Ewent cannot guarantee the working of web services, apps and other third party content that is available through Ewent products. Ewent products with an internal hard disk have a limited warranty period of two years on the hard disk. Ewent could not be held responsible for any data lost. Please make sure that if the product stores data on a hard drive or other memory source, you will make a copy before you return the product for repair.

When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.



www.ewent-online.com

Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Ewent is a member of the Eminent Group